

# EMERSON Charge Module

Website: <http://www.emersonnetworkpower.com.cn/Pages/Default.aspx>

## HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	EMERSON Charge Module		
PLC I/F	RS-232		
Baud rate	9600		
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.	1		

## Device Address:


Bit/Word	Device type	Format	Range	Memo
B	Float_Point_Forced	D	0 ~ 1	
B	Average_Point_Forced	D	0 ~ 1	
W	Switch_Status	D	0 ~ 1	
W	Manual_Status	D	0 ~ 1	
W	Protect_Status	D	0 ~ 1	
W	Failure_Status	D	0 ~ 1	
W	Preset_Voltage	D	0 ~ 1	
W	Preset_Percent	D	0 ~ 1	
W	Output_Voltage	D	0 ~ 1	
W	Output_Current	D	0 ~ 1	
W	High_Limit	D	0 ~ 1	
W	Low_Limit	D	0 ~ 1	
W	Float_Point_Setting	D	0 ~ 1	
W	Average_Point_Setting	D	0 ~ 1	

## Wiring Diagram:

RS-232 Terminal (Diagram 1 ~ Diagram 3)


### Diagram 1

<b>cMT Series</b>	<b><i>cMT3071 / cMT3072 / cMT3090 / cMT3103 / cMT3151</i></b>
<b>eMT Series</b>	<b><i>eMT3070 / eMT3105 / eMT3120 / eMT3150</i></b>
<b>MT-iE</b>	<b><i>MT8073iE / MT8102iE</i></b>
<b>MT-XE</b>	<b><i>MT8092XE</i></b>
<b>MT-iP</b>	<b><i>MT6103iP / MT8102iP</i></b>

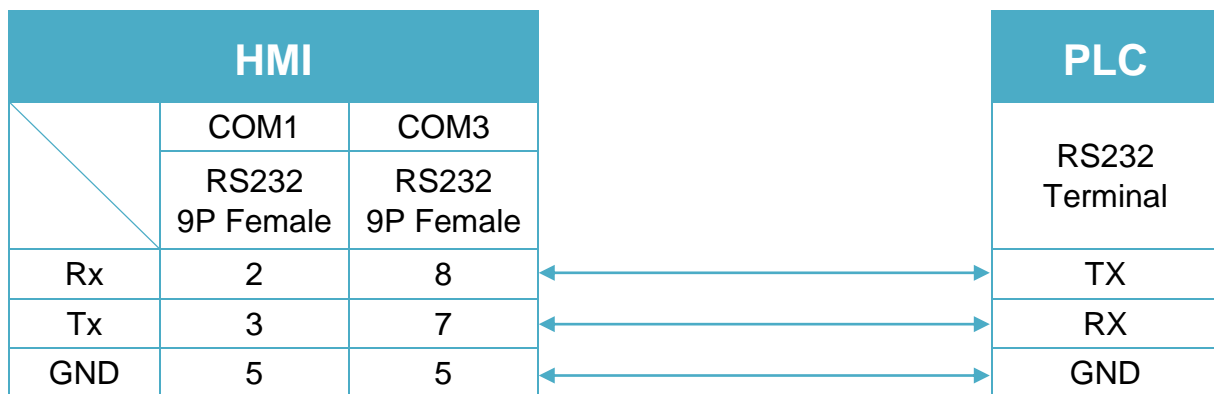

## Diagram 2

<b>cMT Series</b>	<b><i>cMT-SVR / cMT-G01 / cMT-G02 / cMT-HDM / cMT-FHD</i></b>
<b>mTV</b>	<b><i>mTV</i></b>
<b>MT-iE</b>	<b><i>MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE</i></b>
<b>MT-XE</b>	<b><i>MT8121XE / MT8150XE / MT8090XE</i></b>

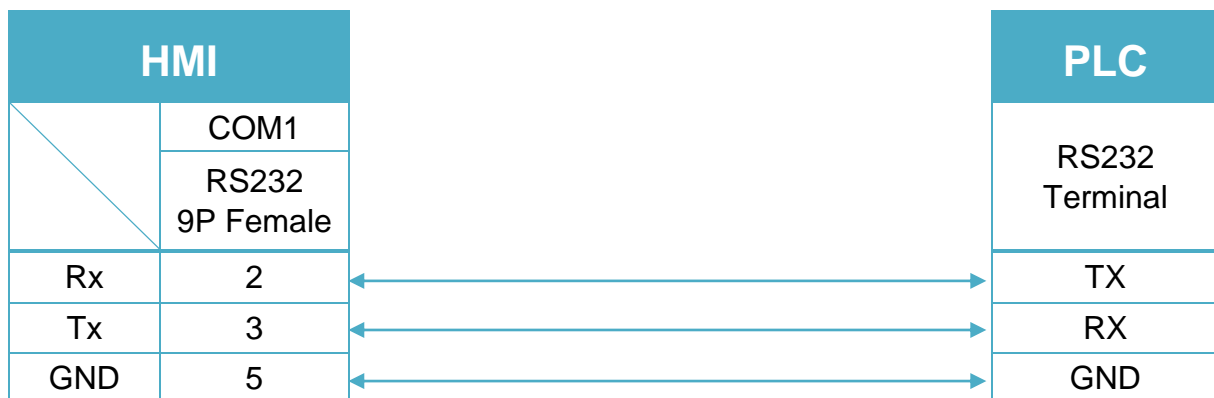

## Diagram 3

<b>MT-iE</b>	<b><i>MT8050iE / MT8053iE</i></b>
<b>MT-iP</b>	<b><i>MT6051iP / MT8051iP / MT6071iP / MT8071iP</i></b>

