

# HeFei ShenNong Motor

Website: <http://www.ahsngd.com/>

## HMI Setting:

Parameters	Recommended	Options	Notes
<b>PLC type</b>	HeFei ShenNong Motor		
<b>PLC I/F</b>	RS485 4W		
<b>Baud rate</b>	9600		
<b>Data bits</b>	8		
<b>Parity</b>	None		
<b>Stop bits</b>	1		
<b>PLC sta. no.</b>	1		


## Device Address:

Bit/Word	Device type	Format	Range	Memo
W	ADDR00	H	1 ~ D	
W	ADDR01	H	1 ~ D	
W	ADDR02	H	1 ~ D	
W	ADDR03	H	1 ~ D	
W	ADDR04	H	1 ~ D	
W	ADDR05	H	1 ~ D	
W	ADDR06	H	1 ~ D	
W	ADDR07	H	1 ~ D	
W	ADDR08	H	1 ~ D	
W	ADDR09	H	1 ~ D	
W	ADDR0a	H	1 ~ D	
W	ADDR0b	H	1 ~ D	
W	ADDR0c	H	1 ~ D	
W	ADDR0d	H	1 ~ D	
W	ADDR0e	H	1 ~ D	
W	ADDR0f	H	1 ~ D	
W	ADDR3f	H	0 ~ b	
W	DATAN	D	0 ~ 5	

## Wiring Diagram:


### Diagram 1

<b>cMT Series</b>	<b><i>cMT3151</i></b>
<b>eMT Series</b>	<b><i>eMT3070 / eMT3105 / eMT3120 / eMT3150</i></b>
<b>MT-iE</b>	<b><i>MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE</i></b>
<b>MT-XE</b>	<b><i>MT8121XE / MT8150XE</i></b>

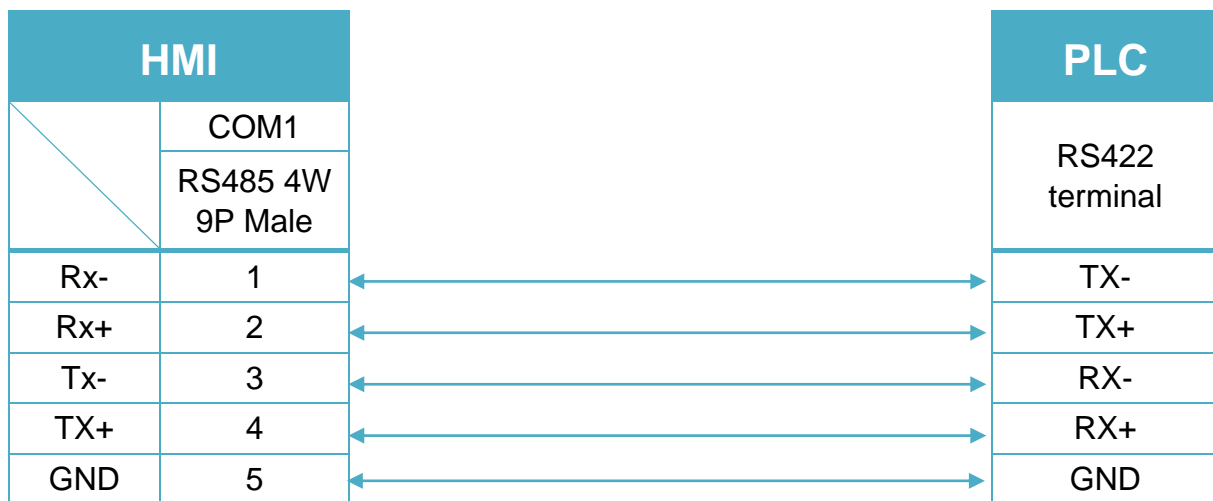


### Diagram 2

<b>cMT Series</b>	<b><i>cMT-SVR / cMT-G01 / cMT-G02 / cMT-HDM / cMT-FHD</i></b>
<b>mTV</b>	<b><i>mTV</i></b>

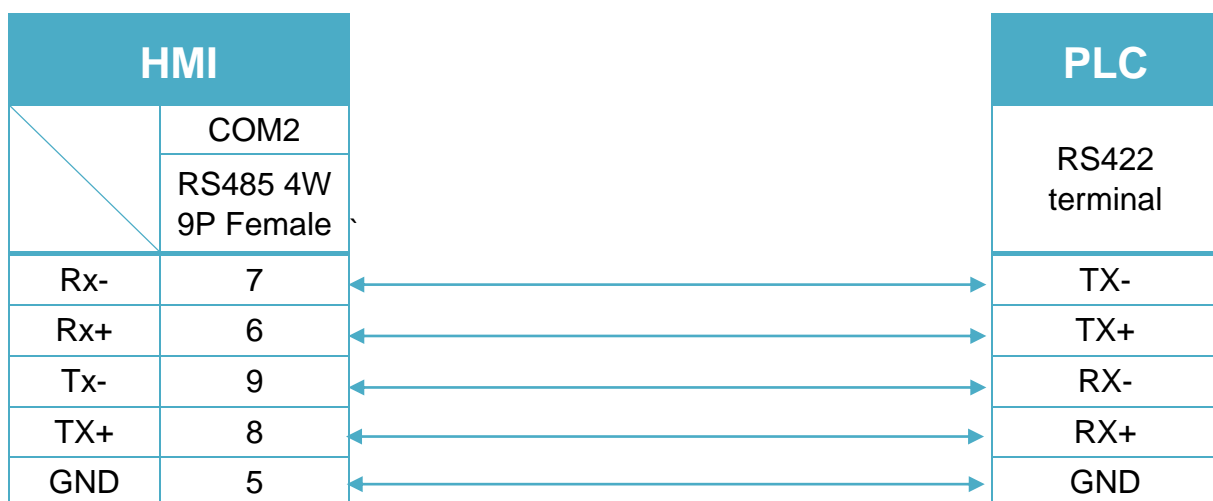

### Diagram 3

<b>cMT Series</b>	<b><i>cMT3071 / cMT3072 / cMT3090 / cMT3103</i></b>
<b>MT-iE</b>	<b><i>MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE</i></b>
<b>MT-XE</b>	<b><i>MT8090XE / MT8092XE</i></b>
<b>MT-iP</b>	<b><i>MT6071iP / MT8071iP / MT6103iP / MT8102iP</i></b>

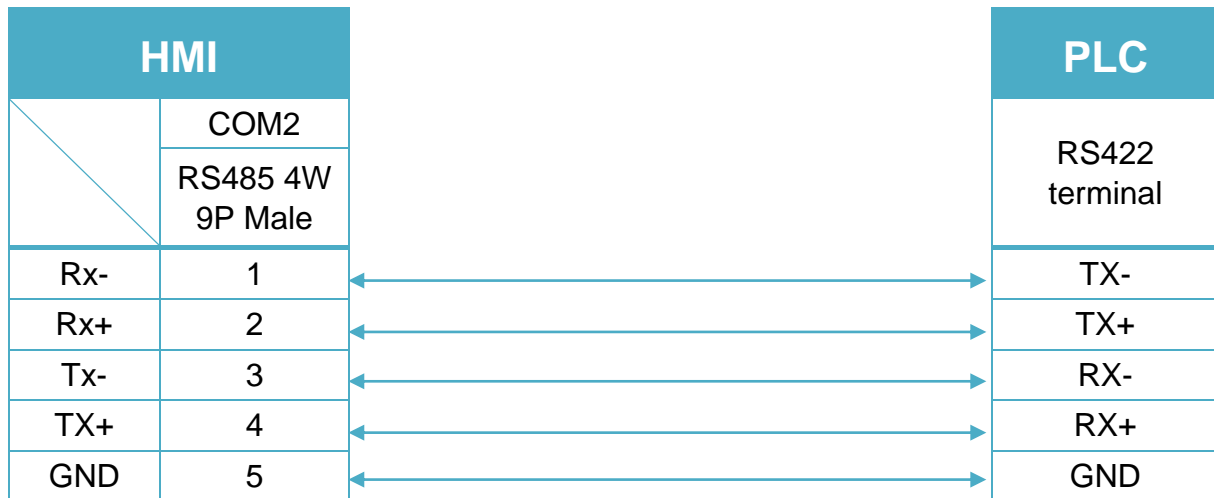

### Diagram 4

<b>MT-iE</b>	<b><i>MT8050iE / MT8053iE</i></b>
<b>MT-iP</b>	<b><i>MT6051iP / MT8051iP</i></b>

